

# Sigen PV Max (5.0–25.0) TP Sigen Hybrid (5.0–25.0) TP

## Installation Guide



Version: 02  
Release date: 2024-04-19




## ! Caution

- Trained or experienced electrical personnel are required to operate the equipment.
- Operators should be familiar with national/regional laws, regulations and standards, the structure and working principle of relevant systems.
- Please read carefully the operating requirements and precautions in this document and "Important Notice" before operating. Failure to do so may result in damage to the equipment that is not covered by the warranty.

## 1 Introduction to Product Appearance


### 1.1 Appearance and Dimensions

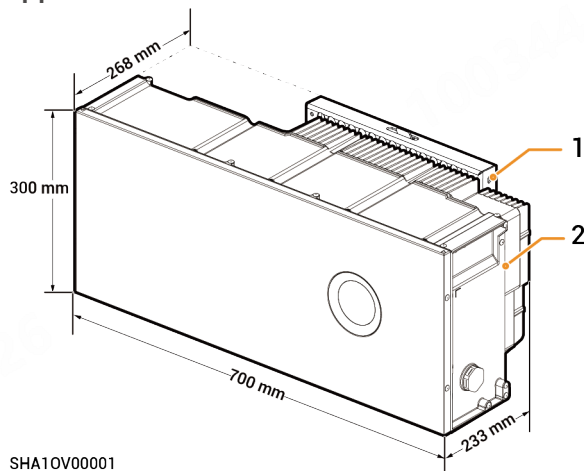

S/N	Equipment/component	Model
1	Wall mounting hardware	-
2	Sigen PV Max (Decorative covers are not configurable)	Sigen PV Max 5.0/6.0/8.0/10.0/12.0/15.0/17.0/20.0/25.0 TP
	Sigen Hybrid	Sigen Hybrid 5.0/6.0/8.0/10.0/12.0/15.0/17.0/20.0/25.0 TP

### 1.2 Ports introduction

Left side view

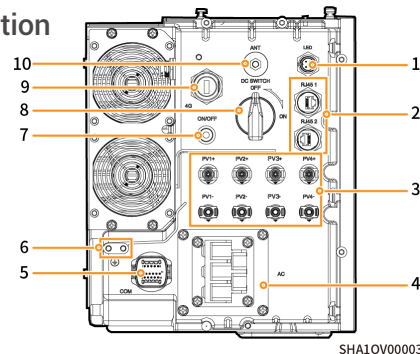

S/N	Name	Marking
1	Decorative cover strip light interface (This interface is unavailable for Sigen PV Max)	LED
2	Network interface	RJ45 1/ RJ45 2
3	DC input interface	PV1+/PV2+/ PV3+/PV4+/ PV1-/PV2-/PV3-/PV4-
4	AC output interface	AC
5	Communication interface	COM
6	Ground screw	-
7	Switch button (This button is unavailable for Sigen PV Max)	ON/OFF
8	DC switch	DC SWITCH
9	Sigen CommMod interface	4G
10	Antenna interface	ANT

## 2 Pre-installation Check

- According to the packing list, check whether the components are complete and in good appearance. If any abnormality occurs, contact your sales agent in time.
- Check personal protective equipment and installation tools to ensure that they are complete; If not, please make them up.
- Check the customer-provided cable to ensure that the quantity and specifications are correct; if not, prepare again.

### Protective equipment



Safety hat



Goggles



Dust mask



Protective gloves




Insulating gloves



Insulating shoes

### Installation tool



Power drill



Heat gun



Wire cutter



Hydraulic pliers



Crimping pliers



Wire stripper



Scissors




Cable tie



Heat shrinkable sleeve



Vacuum cleaner



Insulation screwdriver set sleeve



Insulation sleeve set



Torque socket wrench




Crimping pliers  
(model: H4TC0003  
Manufacturer:  
Amphenol)




Open-end wrench  
(model: H4TW0001  
Manufacturer:  
Amphenol)



hexagonal L-  
type wrench (4mm  
on opposite side)



Rubber mallet



Tape measure



Marker




Level

## ! Caution

- The specifications of the Installer-provided cable must comply with the cable regulations and standards of the country or region standards.
- L1, L2, L3, N and PE should be connected to other equipment in sequence without mixing.

### Installer-provided cable

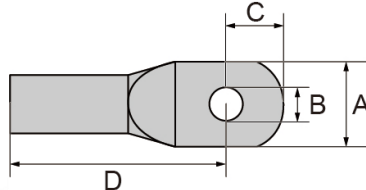S/N	Cable name	Recommended specifications										
1	Protective ground cable of inverter housing	Outdoors five-core copper flexible cable <ul style="list-style-type: none"><li>Sigen PV Max/ Sigen Hybrid (5.0–12.0) TP: Cross-sectional area of core conductor: 4–6 mm<sup>2</sup></li><li>Sigen PV Max/ Sigen Hybrid (15.0–20.0) TP: Cross-sectional area of core conductor: 6–10 mm<sup>2</sup></li><li>Sigen PV Max/ Sigen Hybrid 25.0 TP: Cross-sectional area of core conductor: 10–16 mm<sup>2</sup></li></ul>										
2	AC cable	Outdoors five-core copper flexible cable (L1, L2, L3, N, PE) <ul style="list-style-type: none"><li>Sigen PV Max/ Sigen Hybrid (5.0–12.0) TP: Cross-sectional area of core conductor: 4–6 mm<sup>2</sup>; outer diameter: 13–19 mm</li><li>Sigen PV Max/ Sigen Hybrid (15.0–20.0) TP: Cross-sectional area of core conductor: 6–10 mm<sup>2</sup>; outer diameter: 19–22 mm</li><li>Sigen PV Max/ Sigen Hybrid 25.0 TP: Cross-sectional area of core conductor: 10–16 mm<sup>2</sup>; outer diameter: 22–25 mm</li></ul> Requirements for M5 OT Terminal: Please purchase the OT terminals according to the following requirements. <table><tr><th>Item</th><th>Description</th></tr><tr><td>A</td><td>≤15 mm</td></tr><tr><td>B</td><td>5.3–5.5 mm</td></tr><tr><td>C</td><td>≤7.5 mm</td></tr><tr><td>D</td><td>≤26 mm</td></tr></table> 	Item	Description	A	≤15 mm	B	5.3–5.5 mm	C	≤7.5 mm	D	≤26 mm
Item	Description											
A	≤15 mm											
B	5.3–5.5 mm											
C	≤7.5 mm											
D	≤26 mm											
3	RS485 signal cable	Outdoor shielded twisted pair Cross-sectional area of core conductor: 0.5–0.75 mm <sup>2</sup> (multi-core flexible conductor, Tubular terminal needed) 0.5–1 mm <sup>2</sup> (single-strand hard conductor, no tubular terminal needed) Outer diameter: 4.5–6.5 mm Cable length: ≤ 1000 m Baud rate: ≤ 9600 bps										



S/N	Cable name	Recommended specifications
4	RJ45 network cable	Outdoor eight-conductor shielded twin-twisted pair cable Cross-sectional area of conductor: 0.13-0.2 mm <sup>2</sup> Outer diameter: 4–7.5 mm Single cable length: ≤ 100 m <sup>[1]</sup>
5	DC input cable of inverter	Outdoor photovoltaic cable Cross-sectional area of core conductor: 4–6 mm <sup>2</sup> Outer diameter: 4.5–7.8 mm

Note [1]: The cable length should be limited for good communication. Too long cable degrades the communication effect. FE communication distance: ≤ 100 m.

## Tips

Recommended specifications for cables connecting power sensors to Distribution panel and to the grid, as well as step-by-step instructions for wiring, can be found in the accompanying documentation for each respective model.

## 3 Site Selection Requirements

### Tips

The warranty applies when the equipment has been installed properly for its intended use and in accordance with the operating instructions.

#### Installation environment


- Do not install the equipment in smoky, flammable, or explosive environments.
- Avoid exposing the equipment to direct sunlight, rain, standing water, snow, or dust. Install the equipment in a sheltered place. Take preventive measures in operating areas prone to natural disasters such as floods, mudslides, earthquakes, and typhoons.
- Do not install the equipment in an environment with strong electromagnetic interference.
- Ensure that the temperature and humidity of the installation environment comply with the equipment's requirements.
- The equipment should be installed in an area that is at least 500 m away from corrosion sources that may result in salt damage or acid damage (corrosion sources include but are not limited to seaside, thermal power plants, chemical plants, smelters, coal plants, rubber plants, and electroplating plants).

#### Installation position

- Do not tilt or overturn the equipment to ensure that it is installed horizontally.
- Do not install the equipment in places easily touched by children.
- Do not install the equipment in places with fire or damp.
- Please keep away from the daily work and living places.
- Do not install the equipment in a sealed, poorly ventilated location without fire protection measures and difficult access for firefighters.
- The equipment will generate heat when operating. If the device is installed indoors, please ensure that the room is well ventilated. It is prohibited to cause the indoor temperature to rise significantly due to the operation of the device.
- Do not install the equipment in mobile scenarios such as RVS, cruise ships, and trains.
- You are advised to install the equipment in a location where you can easily access, install, operate, maintain it, and view the indicator status.
- When installing the equipment in the garage, do not install the equipment in the position where the vehicle passes through to avoid collision.


## Mounting surface

- Do not install the equipment on a flammable installation base.
- The installation base should meet the load-bearing requirement. Solid brick-concrete structures, concrete walls are recommended.
- The surface of the installation base must be smooth and the installation area must meet the installation space requirements.
- No water or electricity is routed inside the installation base to prevent drilling hazards during equipment installation.

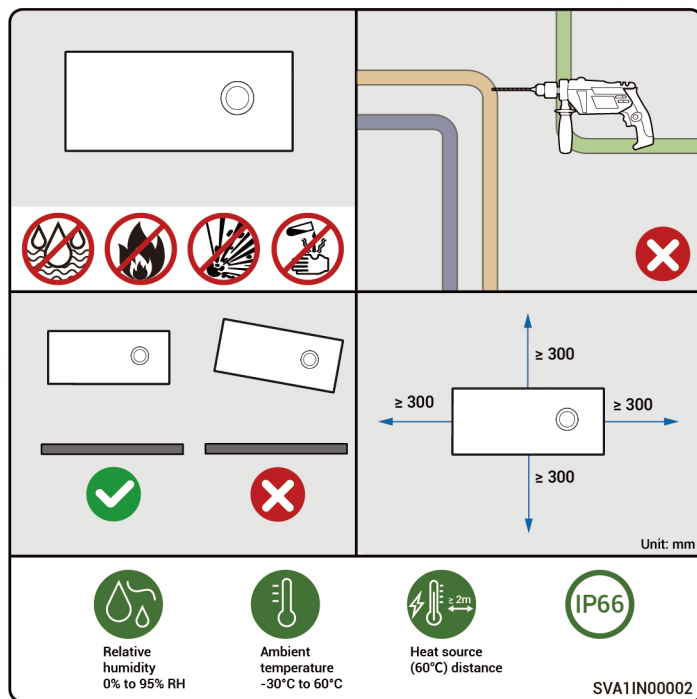


## 4 Equipment Installation


1

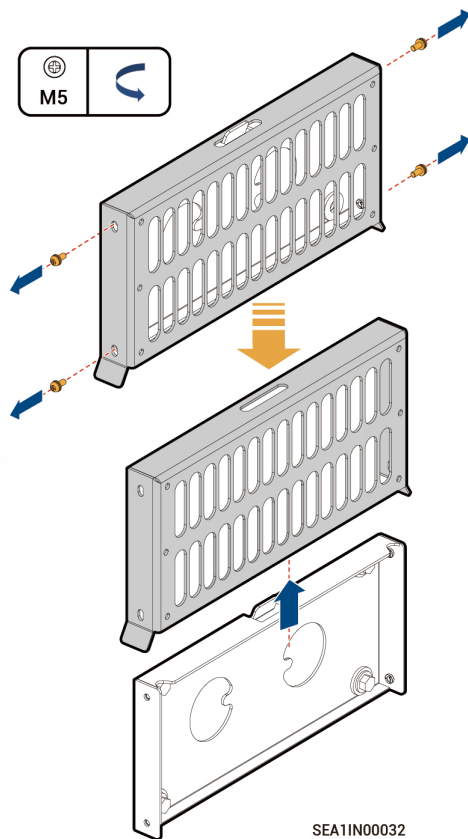


2

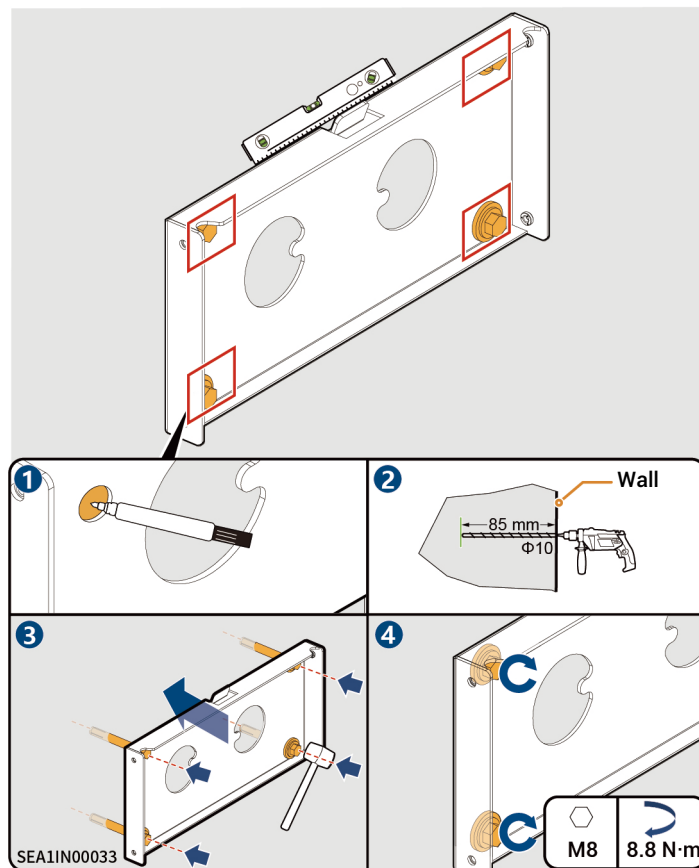

3

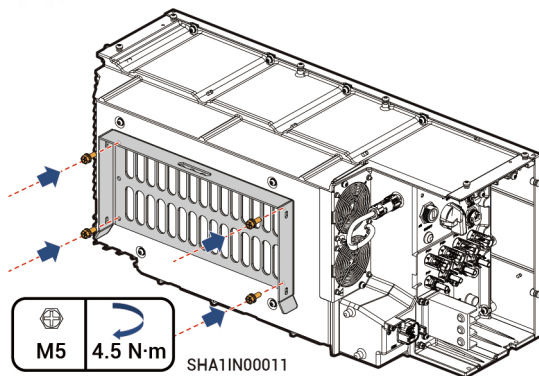

4

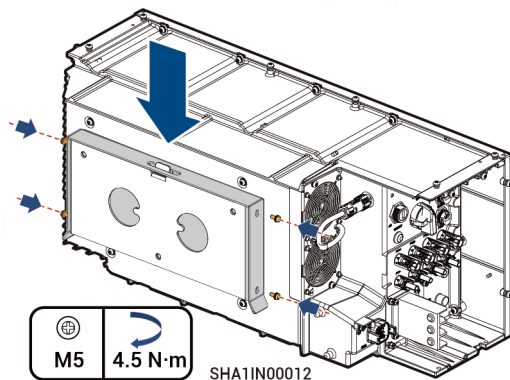

### ⚠ Caution

- The Sigen Hybrid can be tuned to light storage scenarios. Please follow this section in reverse to install the Sigen Hybrid on the SigenStor BAT after removing it from the wall. Please refer to "SigenStor Home Installation Guide –Three-phase System A1" for details.
- Before making any adjustments to the installation scenarios of Sigen Hybrid, ensure that Sigen Hybrid is powered off.

## 4 Cable Connection and Component Installation



### Warning

Before connecting cables, ensure that DC SWITCH is in the OFF state, and the front switch of the AC line is off.

### Tips

- Bind the power cable separately from the signal cable.
- PVC wiring ducts or PVC conduits are recommended to wrap cables outside decorative parts. 60 × 50 mm PVC wiring ducts are recommended and PVC conduits with diameter not less than  $\Phi 80$  are recommended.


### 4.1 Protective Ground Cable of Inverter

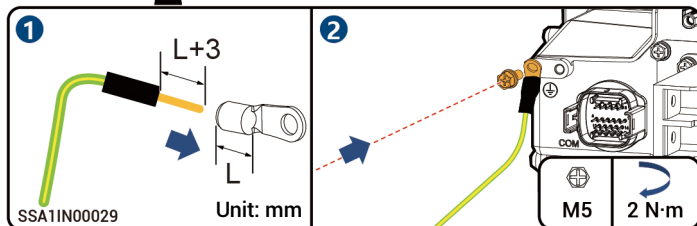
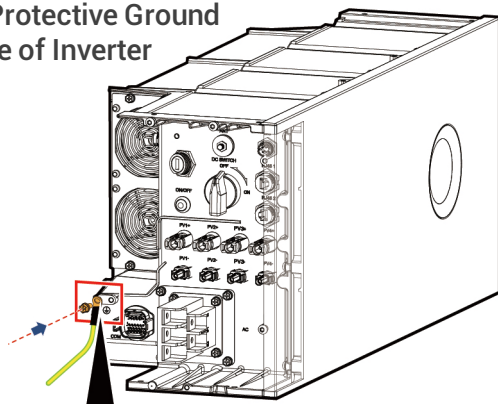


## 4.2 AC Output Cable of Inverter


### Caution

Only Sigen PV Max / Sigen Hybrid (15.0 – 25.0) TP requires cold shrink tube.

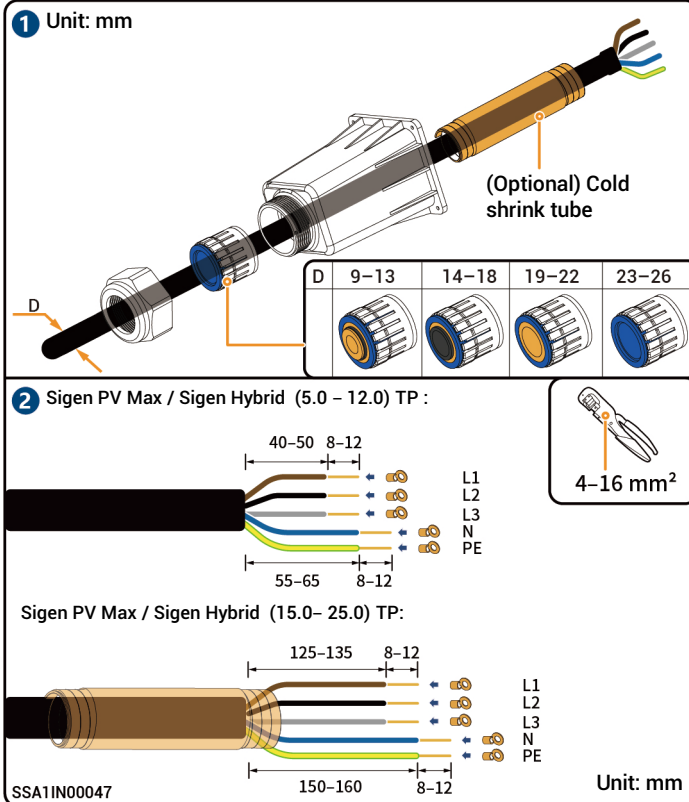

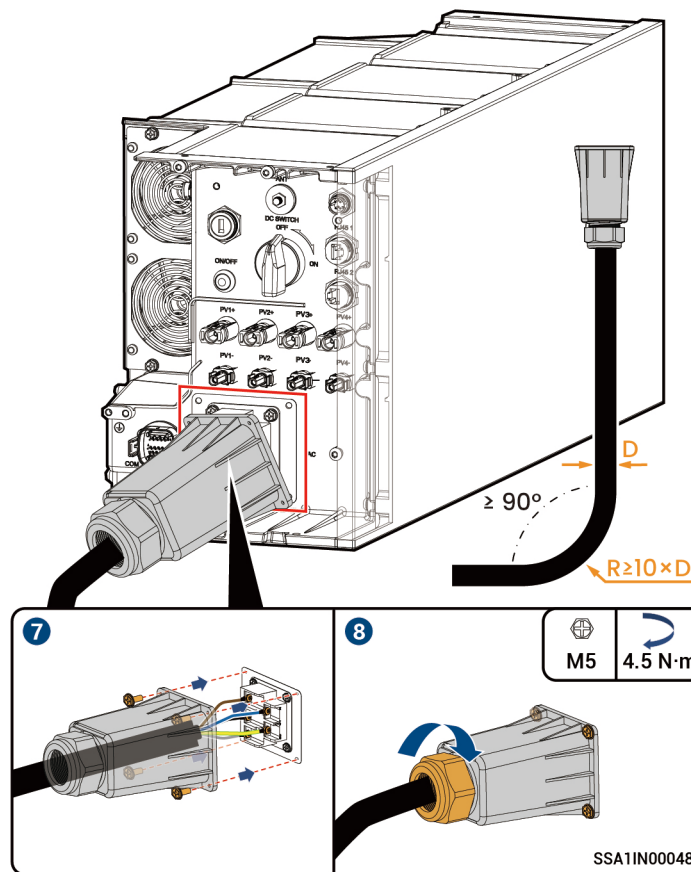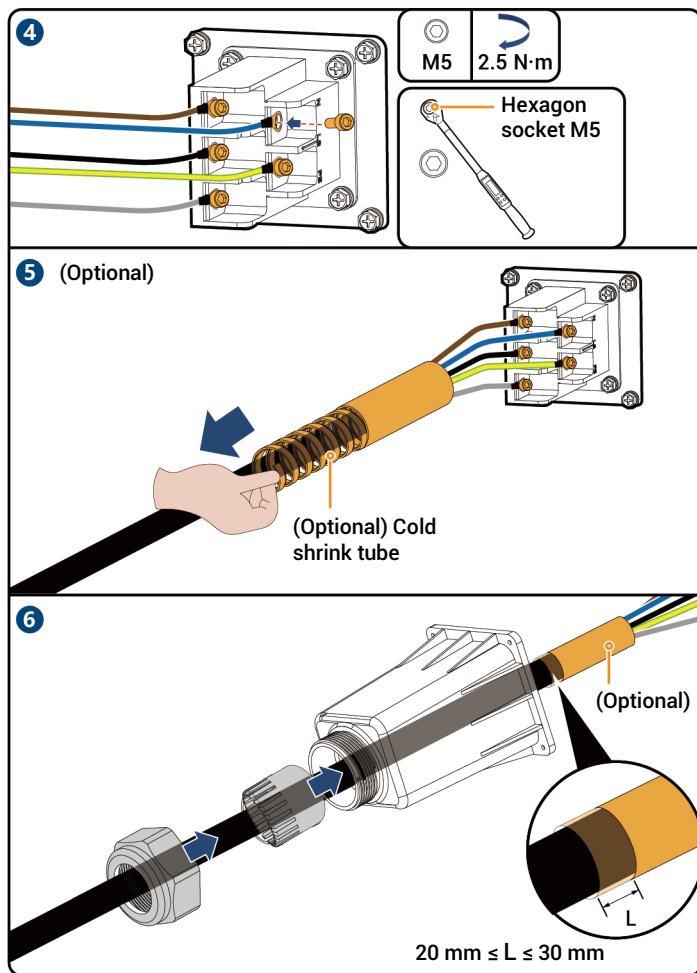

## 4.3 COM terminal of the inverter

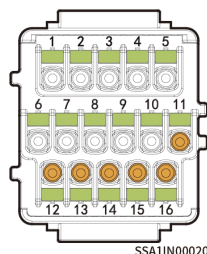



### Tips

- The power sensor needs to be purchased from our company's official channels.
- The appearance and specific wiring of the power sensor can be found in the instruction manual delivered with the case.



Description	Interface definition	COM terminal of the inverter	Sigen Sensor TP-DH(SDM630MOD BUS V2)	Sigen Sensor TP-CT120-DH(SDM630 MCT 40mA/120A)	Sigen Sensor TP-CT300-DH(SDM630MCT 40mA/300A)	Sigen Sensor TP-CT600-DH(SDM630MCT V2/600A)
(Reserved) DO1, connected to third party intelligent electric equipment, such as switch control and heat pump	Dry contact 1 - Common	1	-	-	-	-
	Dry contact 1 - NO	2	-	-	-	-
(Reserved) DO2, connected to third party intelligent electric equipment, such as switch control and heat pump	Dry contact 2 - Common	3	-	-	-	-
	Dry contact 2 - NO	4	-	-	-	-
(Reserved) For power scheduling, such as DRM and Ripple control	DI1, digital input 1	5	-	-	-	-
	DI2, digital input 2	6	-	-	-	-
	DI3, digital input 3	7	-	-	-	-
	DI4, digital input 4	8	-	-	-	-
	DI5, digital input 5	9	-	-	-	-
	Signal GND	10	-	-	-	-
RS485-2. COM port used to access the power sensor	PE signal shielding ground	12	-	-	-	-
	RS485 signal 2_B-	13	B-	13	13	13
	RS485 signal 2_A+	14	A+	14	14	14
RS485-1, custom port. It can be used to connect to third-party EMS controllers, electricity meters or heat pump equipment, etc.	PE signal shielding ground	11	-	-	-	-
	RS485 signal 1_A+	15	-	-	-	-
	RS485 signal 1_B-	16	-	-	-	-



4.3.1 RS485 signal cable of Inverter

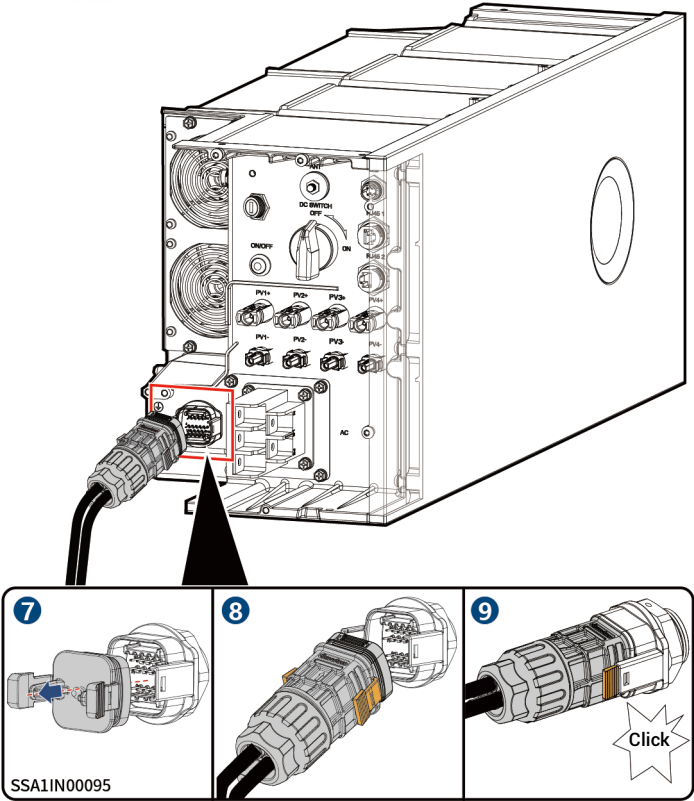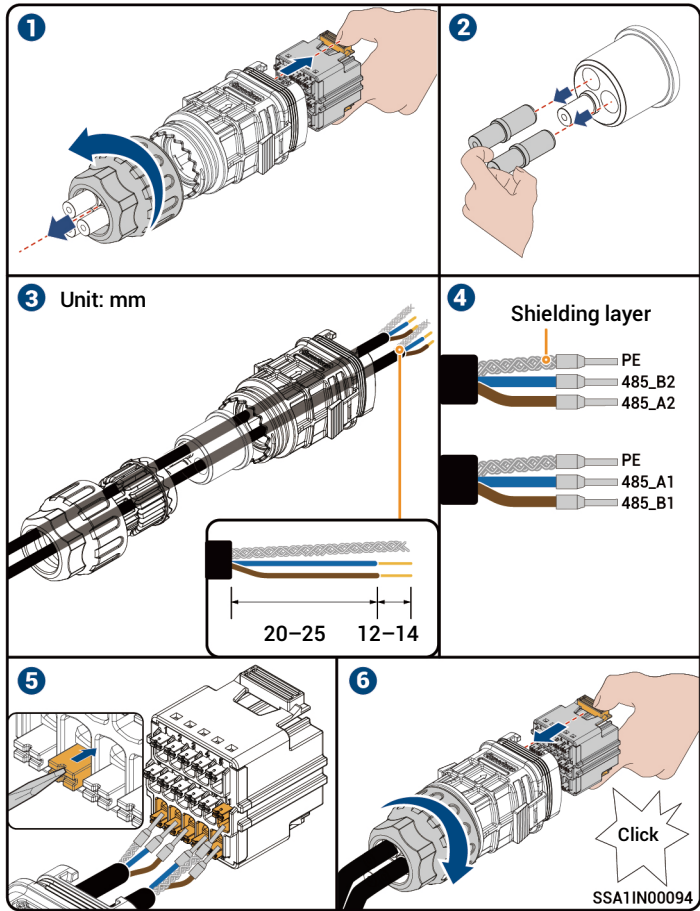

## 4.4 DC input cable of inverter

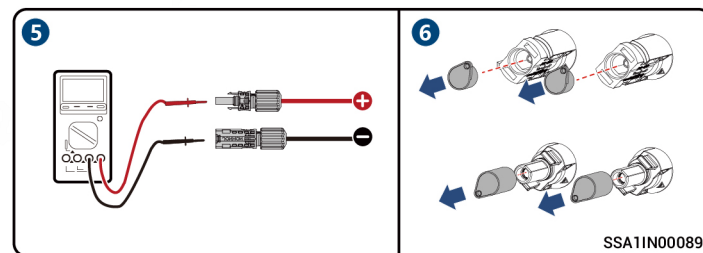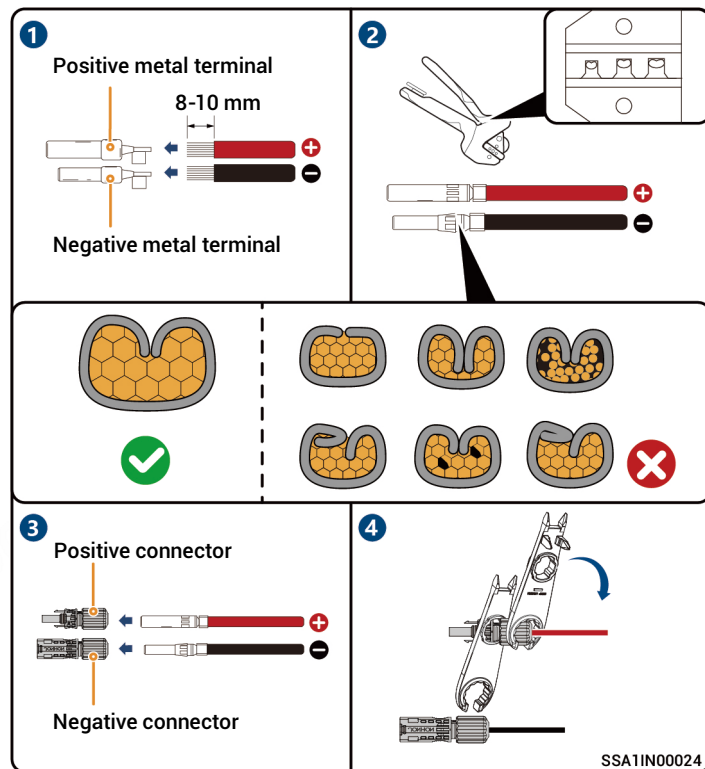

### Caution





- If the voltage is negative, the polarity is incorrect. Rectify the fault in time.
- Please select the PV strings according to the product specifications listed in the table.

Product model	PV string formation configuration
Sigen PV Max/ Sigen Hybrid (5.0–8.0) TP	connected with 2 channels of strings (PV1+/PV2+/PV1-/PV2-)
Sigen PV Max/ Sigen Hybrid (10.0–15.0) TP	connected with 3 channels of strings (PV1+/PV2+/PV3+/PV1-/PV2-/PV3-)
Sigen PV Max/ Sigen Hybrid (17.0–25.0) TP	connected with 4 channels of strings (PV1+/PV2+/PV3+/PV4+/PV1-/PV2-/PV3-/PV4-)

## 4.5 RJ45 Cable of inverter

### Tips


RJ45 cables are EIA/TIA 568B standard cables.

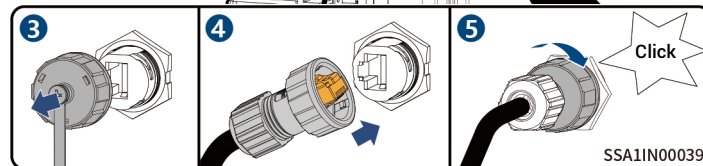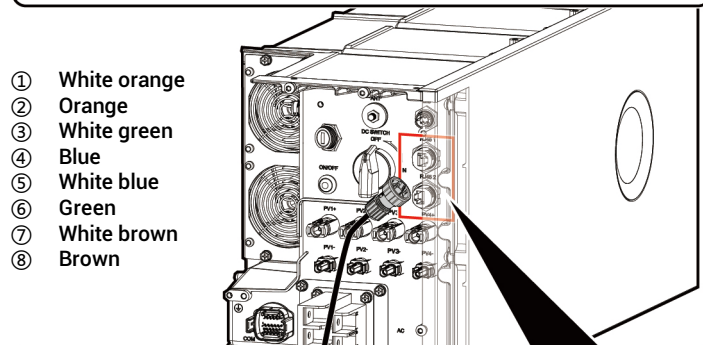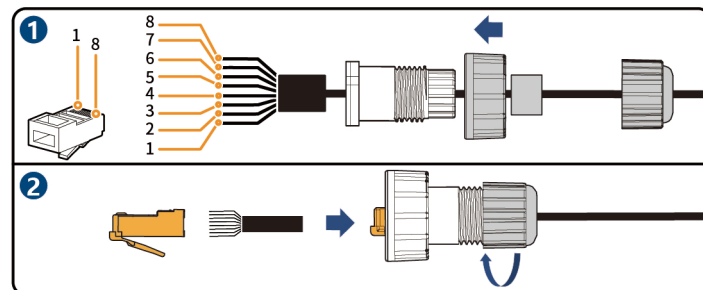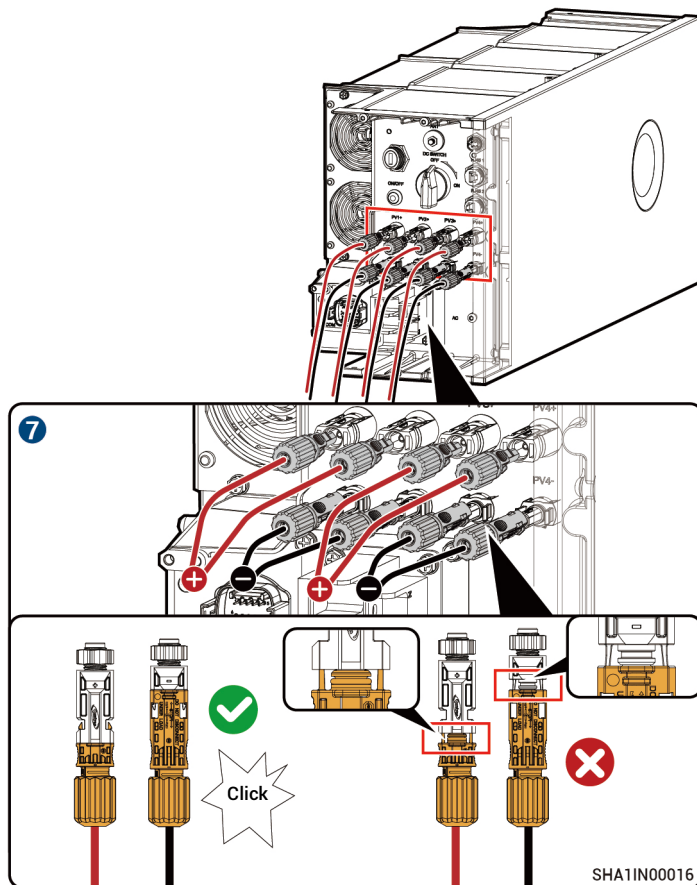



## 4.6 Sigen CommMod Installation

### Tips

Sigen CommMod is required for 4G communication.

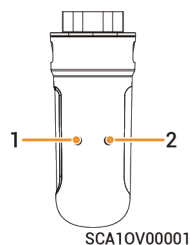



S/N	Indicator	Description
1	Power indicator	-
2	Network state indicator	<ul style="list-style-type: none"> <li>Slow flashing(200 ms on/1800 ms off): The network is being connected</li> <li>Slow flashing(1800 ms on/200 ms off): Standby</li> <li>Quick flashing(125 ms on/125 ms off): Data is being transferred</li> </ul>

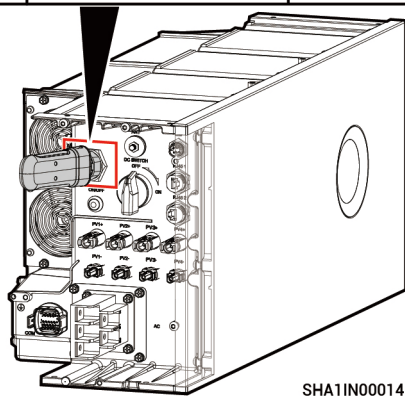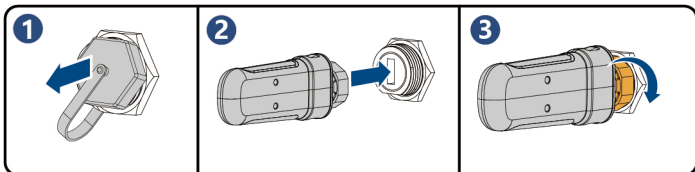

## 4.7 WLAN antenna stick Installation

### Tips

WLAN communication requires the installation of WLAN antenna stick.

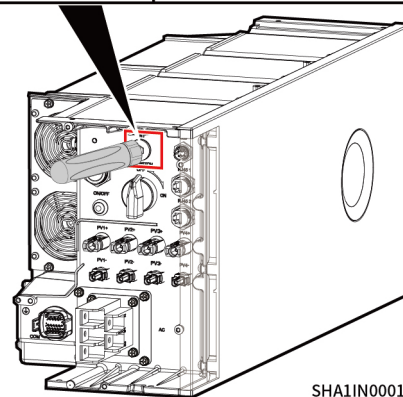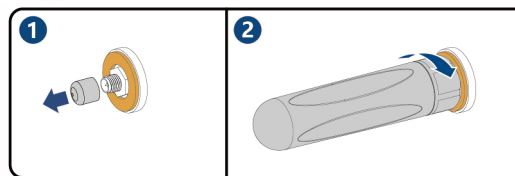


## 5 Post-installation Check

S/N	Check Item
1	The equipment has been securely installed.
2	Ground cables, DC cables, signal cables, etc. are installed accurately without leftovers.
3	The cable fastening screws or terminals are properly installed.
4	There are no sharp spikes or acute angles at the cut point of the cable tie.
5	DC SWITCH is in the OFF state.
6	Ports that are not in use have waterproof covers or plugs installed.
7	There is no construction left inside or outside the equipment.

## 6 Equipment Power-On

1. Turn on the preceding switch.
2. Rotate DC SWITCH to ON.
3. Observe the indicators on the front side of the inverter to learn about the equipment status.

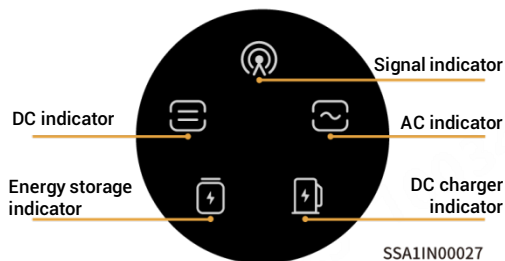


Indicator	Color	State	Meaning
		-	The management system is not connected.
		Flash	Connected to local App.
		Always on	Connected to the management system using an FE or WLAN.
		Always on	Connected to the management system over 4G.
		Flash	Insufficient traffic for Sigen CommMod.

Indicator	Color	State	Meaning
		Always on	The DC side is connected but not running.
		Always on	The DC side is running.
		-	The DC side is not connected.
		Flash	The DC side is faulty.
		Always on	The Sigen PV Max is faulty.
		Always on	The AC side is connected but not running.
		Always on	Grid-connected operation.
		Always on	Off-grid operation.
		-	The AC side is not connected.
		Flash	Off-grid overload operation.
		Flash	The AC side is faulty.
		Always on	The inverter is faulty.

## 7 Download and create new system for mySigen APP

- 1 Please enter the "Partner" → "Register Now" at the Company's official website (<https://www.sigenenergy.com>), and complete the account registration based on facts.
- 2 Download the mySigen App and create new system for the device.

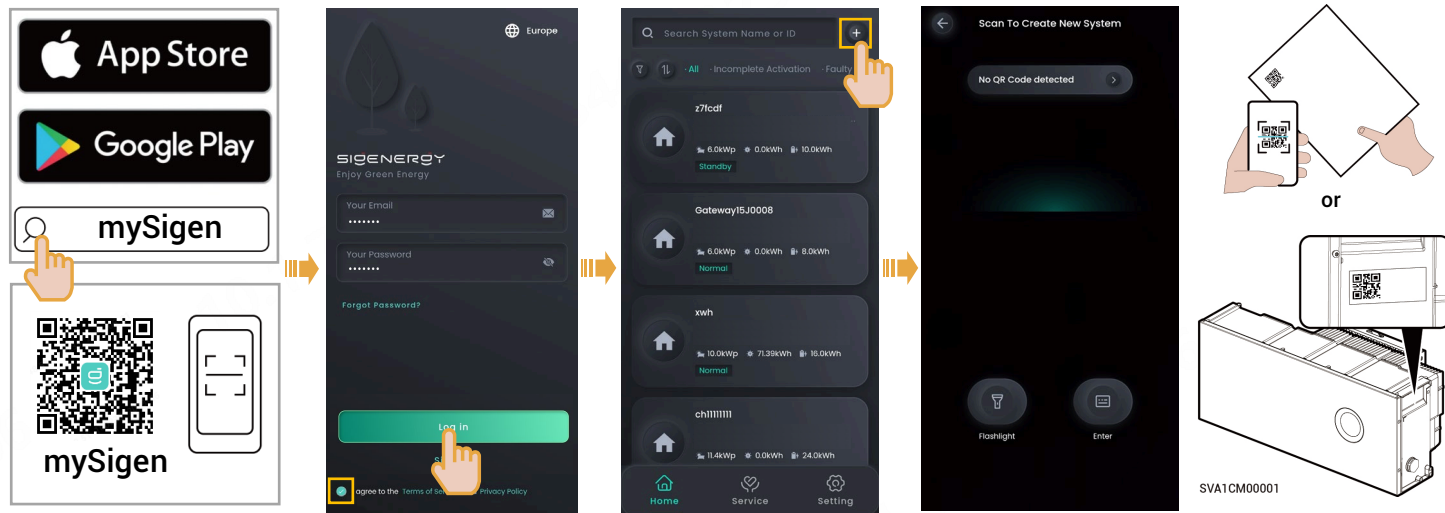

Scan the SN code label on the accompanying box material. If the SN is lost, scan the SN on the side of the inverter.

### Tips

The following steps are different when the equipment has already been connected or not connected to the internet (that is, FE and 4G communication fault), as described below.

## Already connected to the internet:

The image displays a five-step mobile application interface for adding a new system. Each screen has a progress bar at the top with steps 1 through 5. Step 1 (Basic) includes fields for System Location, Timezone, Total Panel Capacity (kWp), and Owner Details (First Name, Last Name, Email). A hand icon points to the location field. Step 2 (Devices) shows a 'Signen pv max' device with its SN, a 'Download and install' button, and a confirmation checkbox. A hand icon points to the checkbox. Step 3 (Parameters) includes fields for Grid Code, Export Limitation, Operational Mode, and Off-Gird. A hand icon points to the 'Next' button. Step 4 (Check) shows a 'System check has been completed!' message and a 'Check Again' button. It also displays connection status for AC-side Cable, Power Meter, and Network (Ethernet, WLAN, Cellular). A hand icon points to the 'Next' button. Step 5 (Confirm) shows a summary of settings and a 'Confirm' button. A hand icon points to the 'Confirm' button.

Manually locate the address, set the Timezone, and enter Owner Details.


Perform upgrades where necessary.

You can manually set and modify some function parameters of the power station.

**3** Upon completion of the new system creation, the installer shall inform the owner to check its "sigencloud" e-mail within 24 hours and proceed with activating its account.




## Not connected to the internet (that is, FE and 4G communication fault):

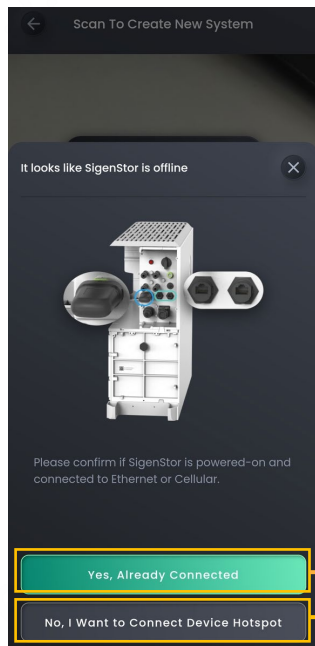


Click this button if the equipment is still not connected to the internet

**Caution**  
The equipment hotspot is available for 2 hours. Please connect to the hotspot as soon as possible.

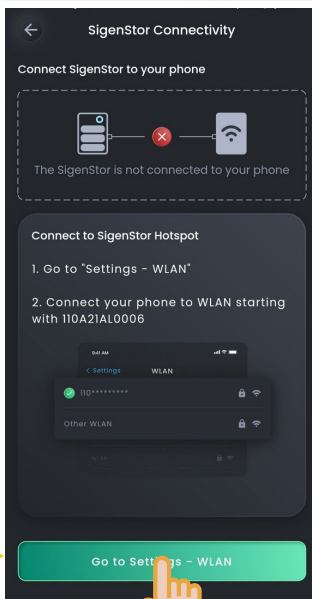

Connect the WLAN hotspot of the equipment.  
The hotspot is named equipment SN code.

If the equipment has already been connected to the internet, click this button and go to the Create New System page and perform operations by referring to the description in the "already connected to the internet" section.

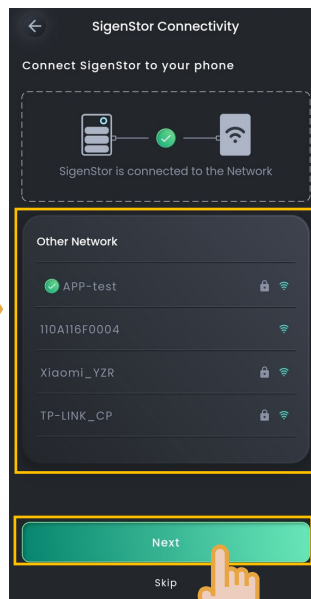

If the installer can choose to connect the equipment to the WLAN hotspot at the owner's premises, connect the available hotspot and go to the Create New System page and perform operations by referring to the description in the "already connected to the internet" section.

Click this button if no WLAN hotspot is available at the owner's premises

← Add New System

1 2 3 4 5

Basic

System Location

Use your location; mySigen will use location permission to show SigenStor position information.

Timezone

Total Panel Capacity (kWp)

Owner Details

First Name

Last Name

Email

The owner will use this email address as login credentials for the mySigen app. Please remind owner to check their email after the add new system process.

Next

Manually locate the address, set the Timezone, and enter Owner Details.

← Add New System

1 2 3 4 5

Devices

Sigen pv max

SN:145632897001

Latest Software Version: V10R001C21SP10B031

Download and install

I confirm all the devices have been add to the system.

What to do when devices are not discovered?

Next

Perform upgrades where necessary.

← Add New System

1 2 3 4 5

Parameters

Grid Code

EN50438-TR

Export Limitation

Operational Mode

Sigen AI Mode

Off-Grid

Next

You can manually set and modify some function parameters of the power station.

← Add New System

1 2 3 4 5

Check

System check has been completed!

Check Again

AC-side Cable Connection

Normal

Power Meter Connection

Connected

Network Connection

Ethernet

Currently used

Connected

WLAN

Failed to connect to hotspot.

Cellular

Dongle not inserted.

Next

← Add New System

1 2 3 4 5

Confirm

Timezone

Europe/Berlin

Export Limitation

Maximum Power of Export Limitation

0kW

Operational Mode

Self-Consumption

Backup Capacity

30%

2 Devices

All the devices have been added to the system.

3 Diagnosis

A full diagnosis has been conducted to the system and devices.

Confirm

**3** Upon completion of the new system creation, the installer shall inform the owner to check its "sigencloud" e-mail within 24 hours and proceed with activating its account.

Sigenergy Technology Co., Ltd.



Website	LinkedIn	YouTube
---------	----------	---------

[www.sigenergy.com](http://www.sigenergy.com)



**Copyright© 2024 Sigenergy Technology Co., Ltd.  
All Rights Reserved.**

Description in this document may contain predictive statements regarding financial and operating results, product portfolio, new technology, configurations and features of product. Several factors could cause difference between actual results and those expressed or implied in the predictive statements. Therefore, description in this document is provided for reference purpose only and constitutes neither an offer nor an acceptance. Sigenergy Technology Co., Ltd. may change the information at any time without notice.